

## Using C32 Compiler to Interface Serial SRAM Devices to PIC32 MCUs

*Author: Pinakin K Makwana  
Microchip Technology Inc.*

### INTRODUCTION


Microchip's serial SRAM product line represents a new way to add additional RAM to an application. With the small 8-pin packages and the SPI interface, these devices give designers added system flexibility. The AN1277 series of serial SRAM devices from Microchip Technology support a half-duplex protocol that functions on a master-slave paradigm that is ideally suited to data stream applications.

The bus is controlled by the microcontroller (master), which accesses the AN1277 using the SPI peripheral built into the MCU. The SPI bus can operate at speeds up to 20 MHz for enhanced throughput. Communications can be paused using the HOLD pin.

This application note is part of a series that provide source code to help the user implement the protocol with minimal effort.

Figure 1 describes the hardware schematic for the interface between Microchip's AN1277 series devices and the PIC32 series of MCUs. The schematic shows the connections necessary between either controller and the serial SRAM as tested, and the software was written assuming these connections. The HOLD pin is tied to VCC because this feature is not used in the examples provided.

**FIGURE 1: CIRCUIT FOR PIC32MX360F512L AND 23XXXX SERIES DEVICE**

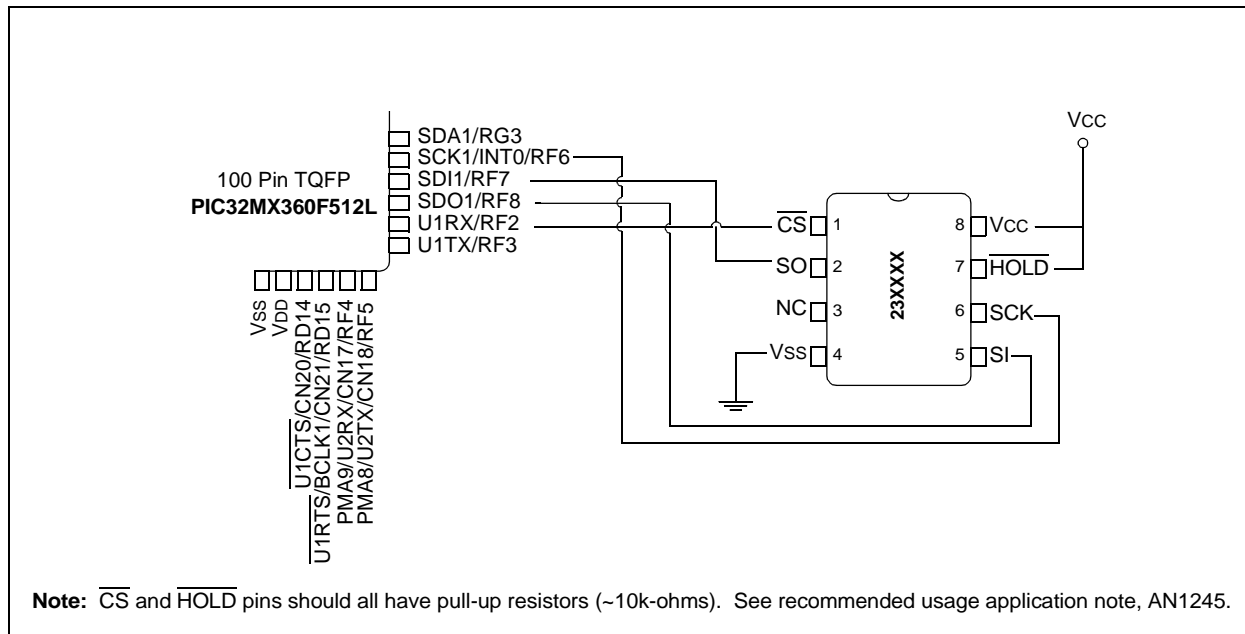

# AN1277

---

## FIRMWARE DESCRIPTION

The purpose of this application note is to offer the designer a set of examples for the read and write functions for using the Microchip SPI serial SRAM. Examples are included for the following modes: Byte, Page and sequential Read and Writes. The code uses an on-chip SPI hardware peripheral to communicate with the serial SRAM.

The code was tested using the 23K256 SRAM mounted to one of the SPI PIM modules. The code is compatible with the PIC32 family of MCUs.

Oscilloscope screen shots are shown in this application note. The MCU was configured to use the crystal on the Explorer 16 board, the internal PLL was enabled and the SPI peripheral was configured to generate a serial clock rate of 10 MHz.

The following functions are provided to access the serial SRAM.

- `SRAMWriteStatusReg`
- `SRAMReadStatusReg`
- `SRAMWriteByte`
- `SRAMReadByte`
- `SRAMWritePage`
- `SRAMReadPage`
- `SRAMWriteSeq`
- `SRAMReadSeq`

## INITIALIZATION


Only one function needs to be called to initialize the SRAM. Using the on-chip SPI peripheral makes communication easier than bit-banging the I/O ports. The `InitSRAM()` function initializes the SPI module and configures the I/O ports. The SPI module is configured using the peripheral library.

## WRITE STATUS REGISTER

The default mode of operation for the serial SRAM is Byte mode and the user must select the appropriate mode before the read or write operation. The functions that are provided configure the SRAM for the correct mode of operation, for example, if a `SRAMWritePage` command is called, then the appropriate operating mode is selected. The STATUS register also has provision for enabling the HOLD feature, but this is not used in these examples. Figure 2 shows an example of the

Write Status Register command. Chip Select is brought low (active) and the opcode is sent out through the SPI port. The Write Status command is given followed by the data to be written, in this case Byte mode is selected.


**FIGURE 2: WRITE STATUS REGISTER**

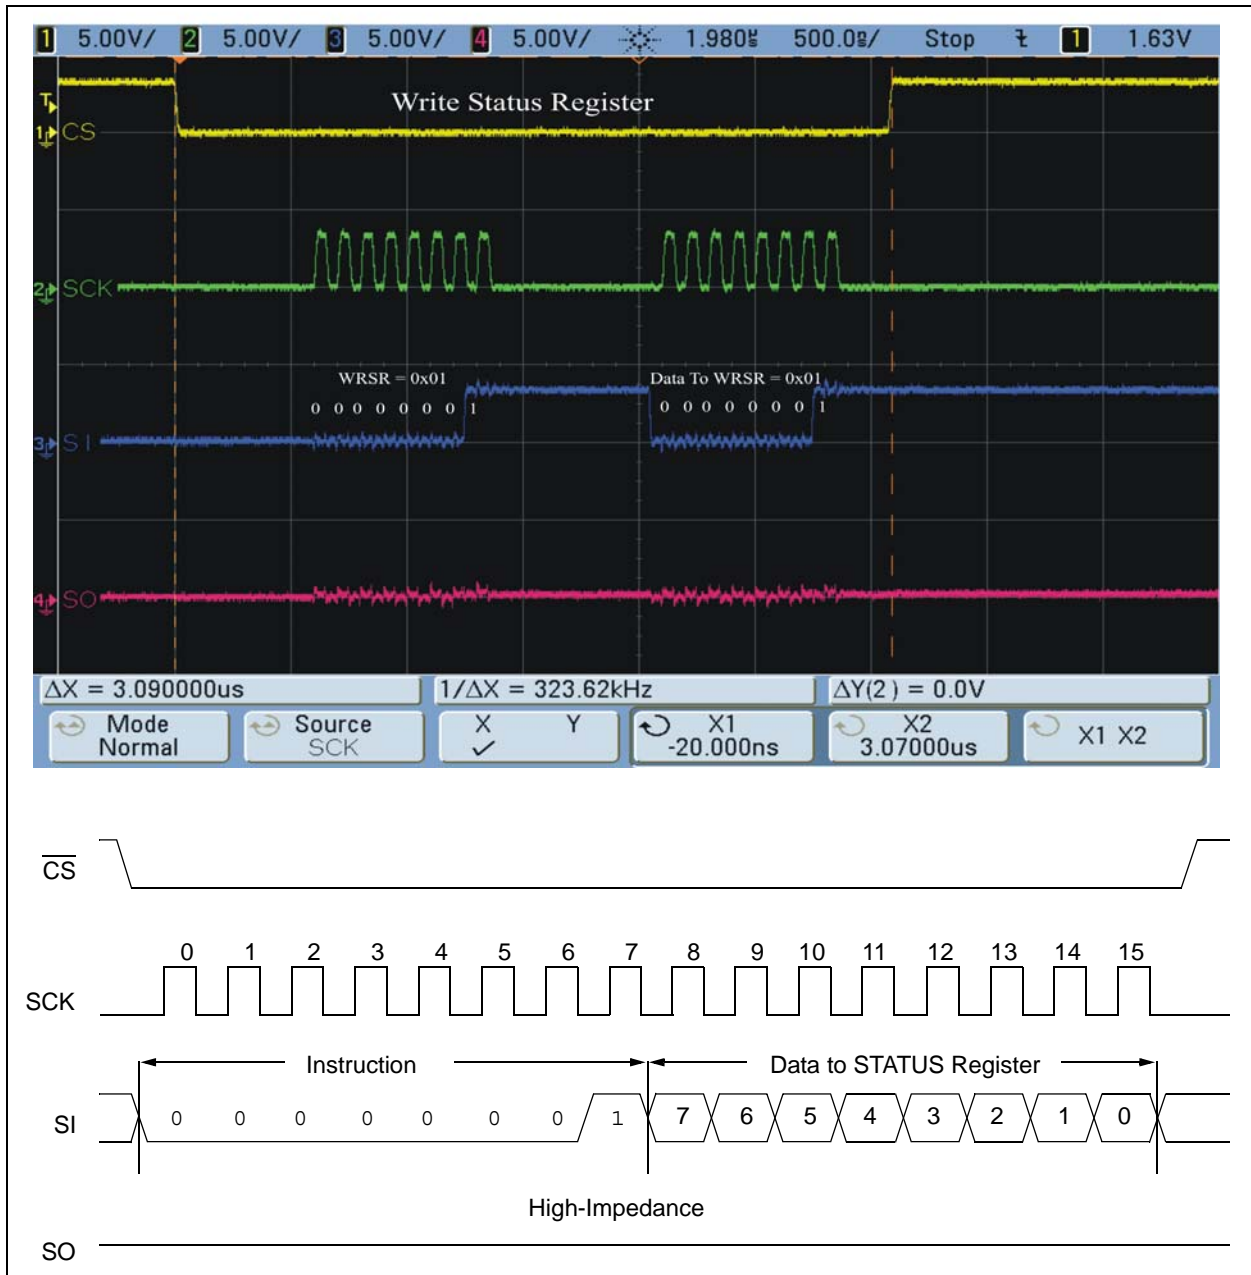

## READ STATUS REGISTER

Figure 3 shows an example of the Read Status Register command to check for the mode of operation and also the current status of the HOLD function.

**FIGURE 3: READ STATUS REGISTER**

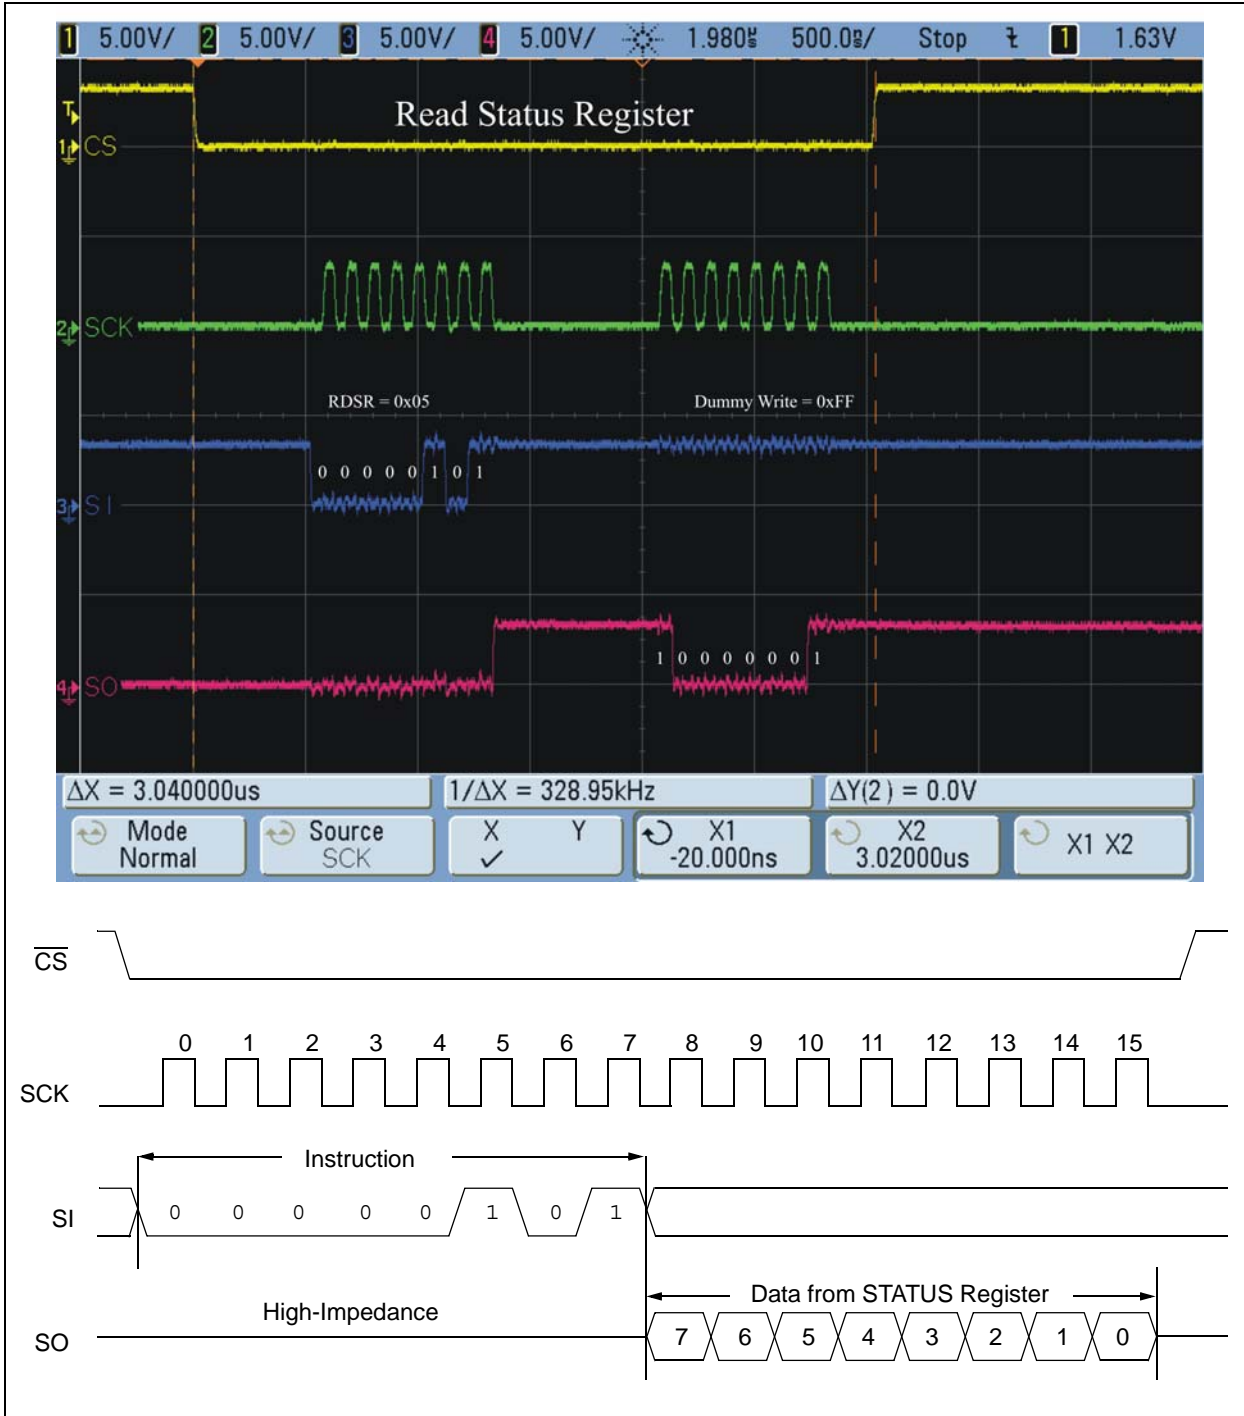

## BYTE WRITE

The byte write operation consists of the following sequence: The Write command followed by the word address and data byte. The serial SRAM uses a 16-bit address, so two bytes must be transmitted for the entire word address, with the Most Significant Byte (MSB) first.

Figure 4 shows an example of the Write command. For this, the device is selected and the opcode, 0x02, is sent. The high address byte is given 0x00, followed by the low address byte, 0x10. Finally, the data is clocked in last, in this case, 0x28.

**FIGURE 4: BYTE WRITE COMMAND, ADDRESS AND DATA**




# AN1277

## BYTE READ

The byte read operation can be used to read data from the serial SRAM. The MCU/DSC sends the command byte followed by the word address. Figure 5 shows an example of the Read command, followed by the MSB and LSB address bytes, followed by the read byte.

**FIGURE 5: BYTE READ (COMMAND BYTE, WORD ADDRESS AND READ BYTE)**

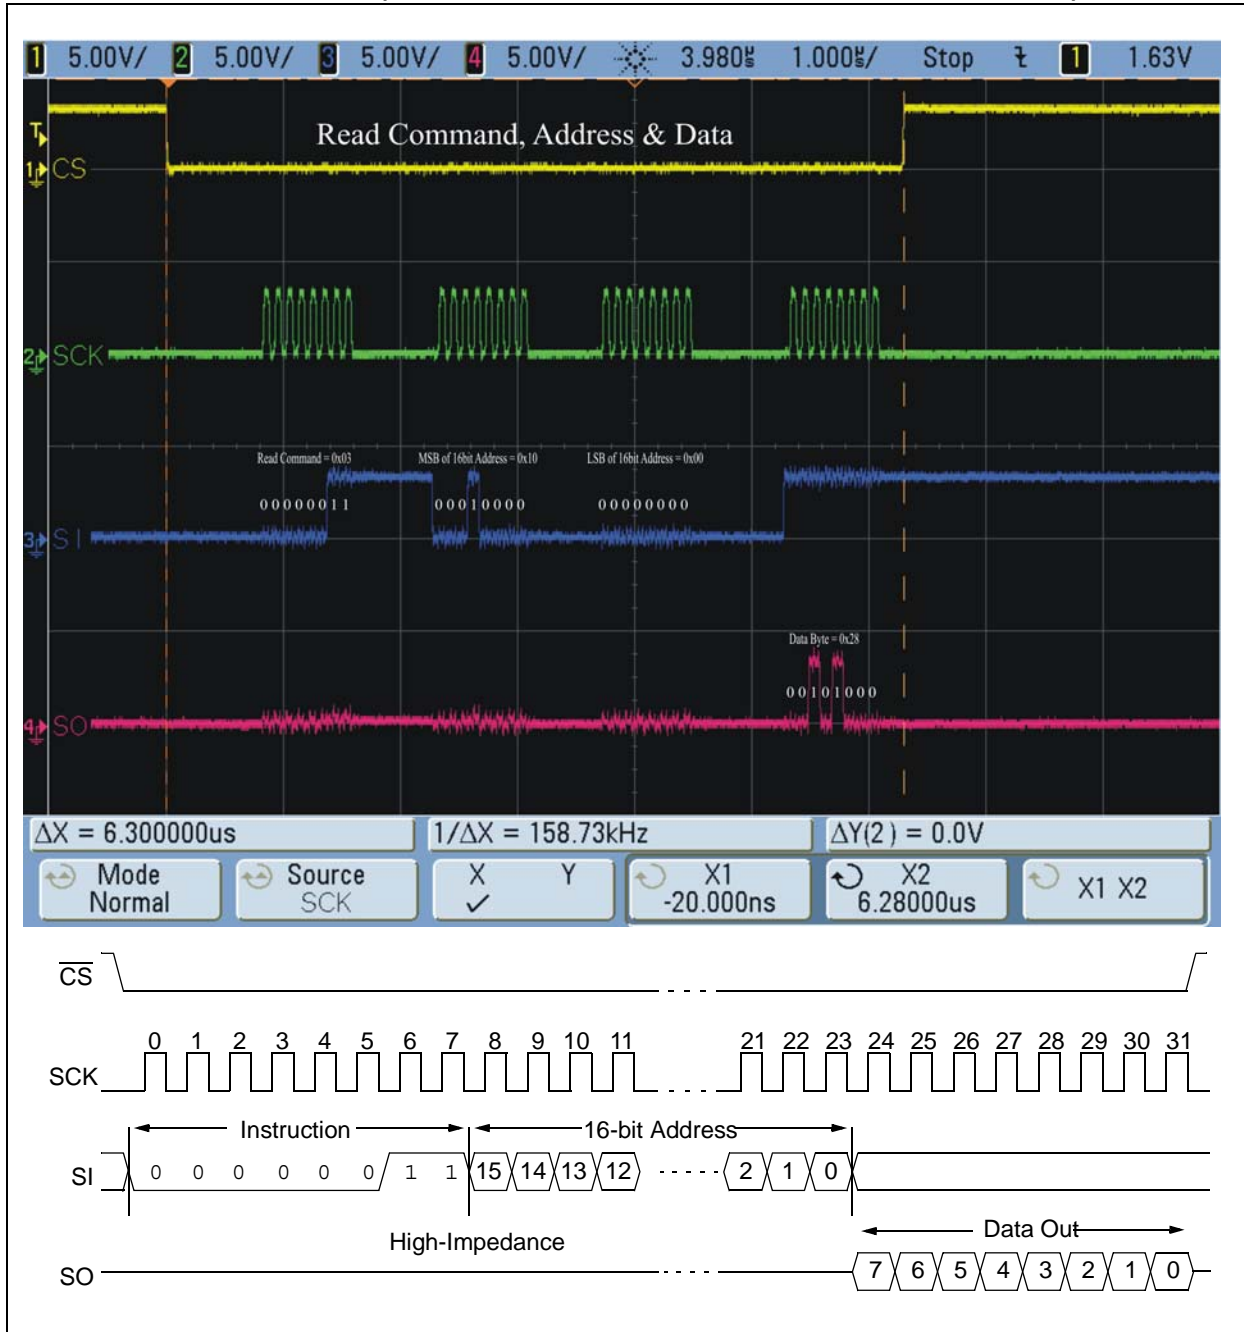


## PAGE WRITE

Page write operations provide a technique for increasing throughput when writing large blocks of data. The serial SRAM features a 32-byte page. By using the page write feature, up to 1 full page of data can be written consecutively. It is important to point out that page write operations are limited to writing bytes within a single physical page regardless of the number of bytes

being written. Physical page boundaries start at addresses that are integer multiples of the page size and end at addresses that are [integer multiples of the page size] - 1. Attempting to write across a page boundary results in the data being wrapped back to the beginning of the current page. Figure 6 shows Write command, address and data byte during a page write operation.

**FIGURE 6: PAGE WRITE (FIRST DATA BYTE)**

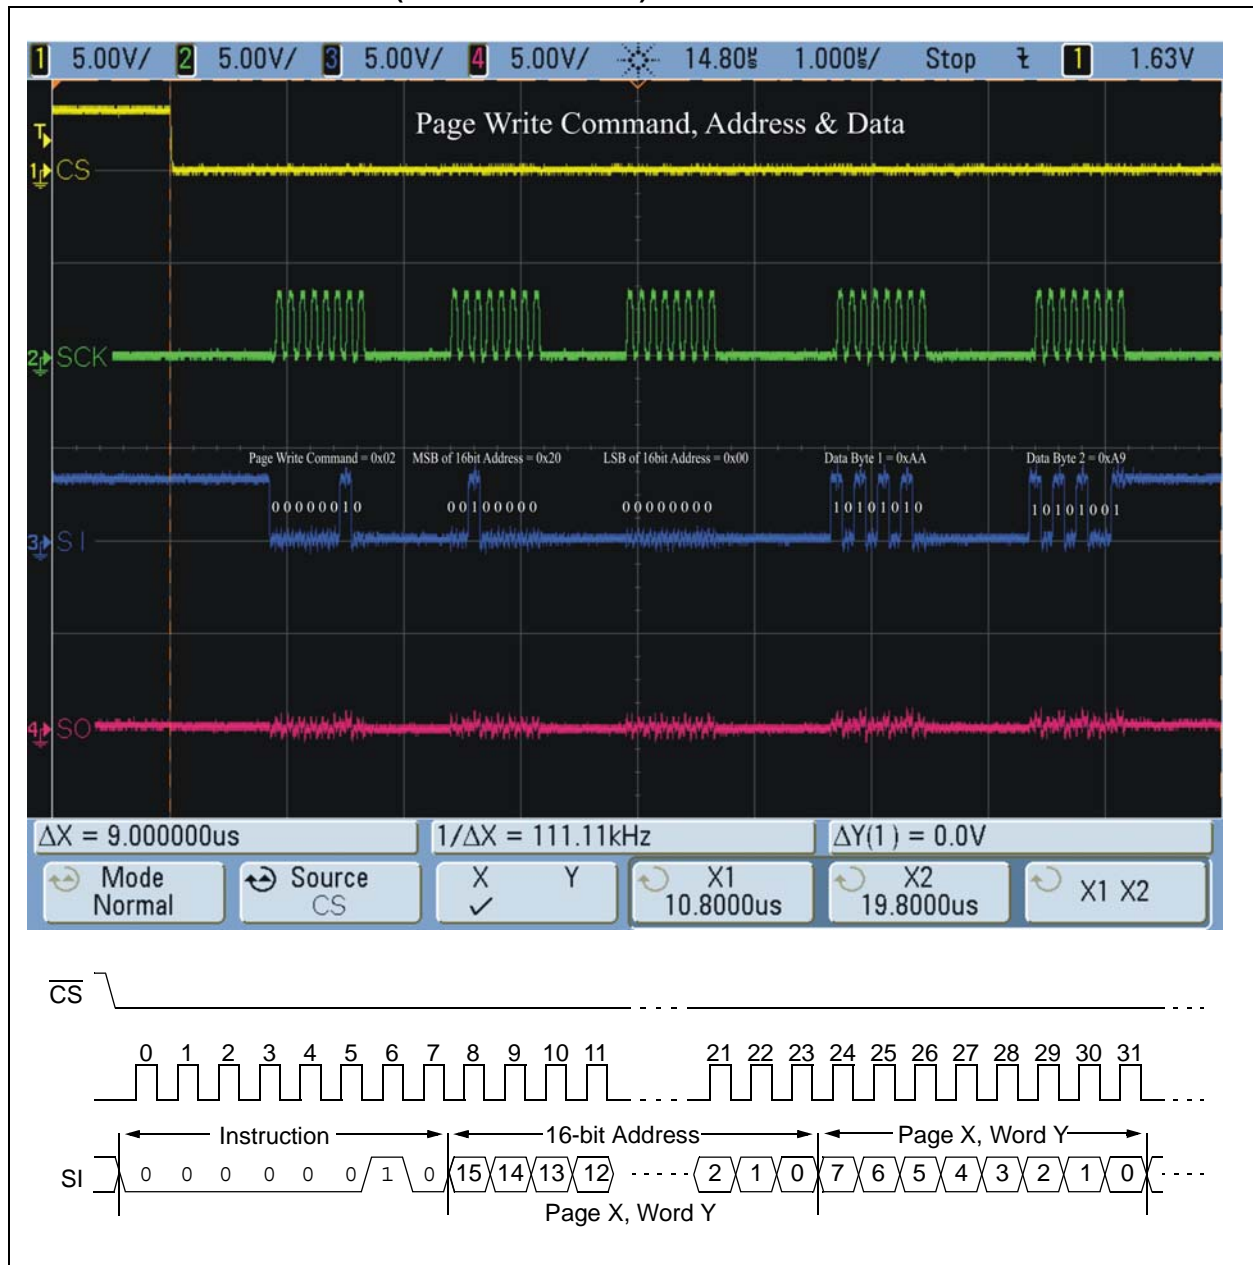


## PAGE READ

Page read operations read a complete string, starting with the specified address. The page read operation also works similar to page write operation and thus a maximum of 32 bytes can be read consecutively.

Figure 7 shows an example of the entire sequence of commands necessary to perform the page read operation. For clarity, only the first byte is shown.

**FIGURE 7: PAGE READ (FIRST READ DATA BYTE)**

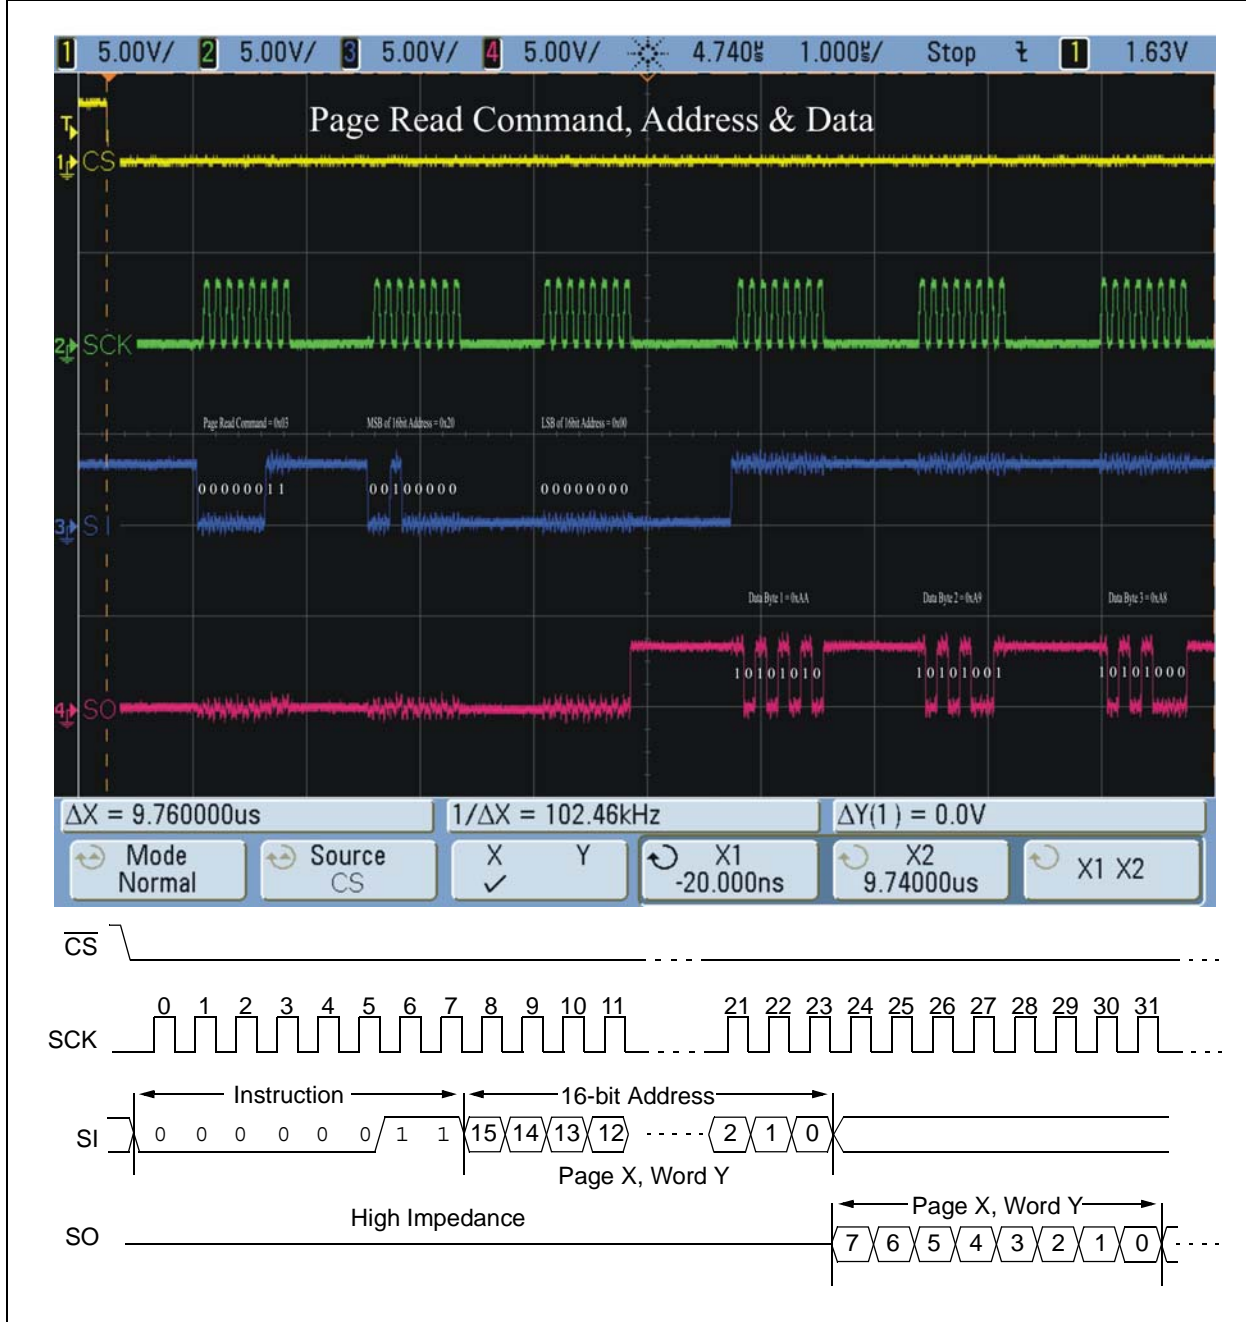




## SEQUENTIAL WRITE

This operation is very useful while writing a long string which is more than the page size (32 bytes). This operation needs Write command (0x02) to be sent followed by upper address byte and lower address byte. The SRAM keeps writing data as long as it receives clock and valid data. When the last location of memory is reached, the next location that is written is the first address (0x0000), that is, the internal address counter rolls over. Figure 8 depicts the entire sequence of commands necessary to perform the sequential write operation. For clarity, only the first byte is shown.


**FIGURE 8: SEQUENTIAL WRITE (FIRST DATA BYTE)**

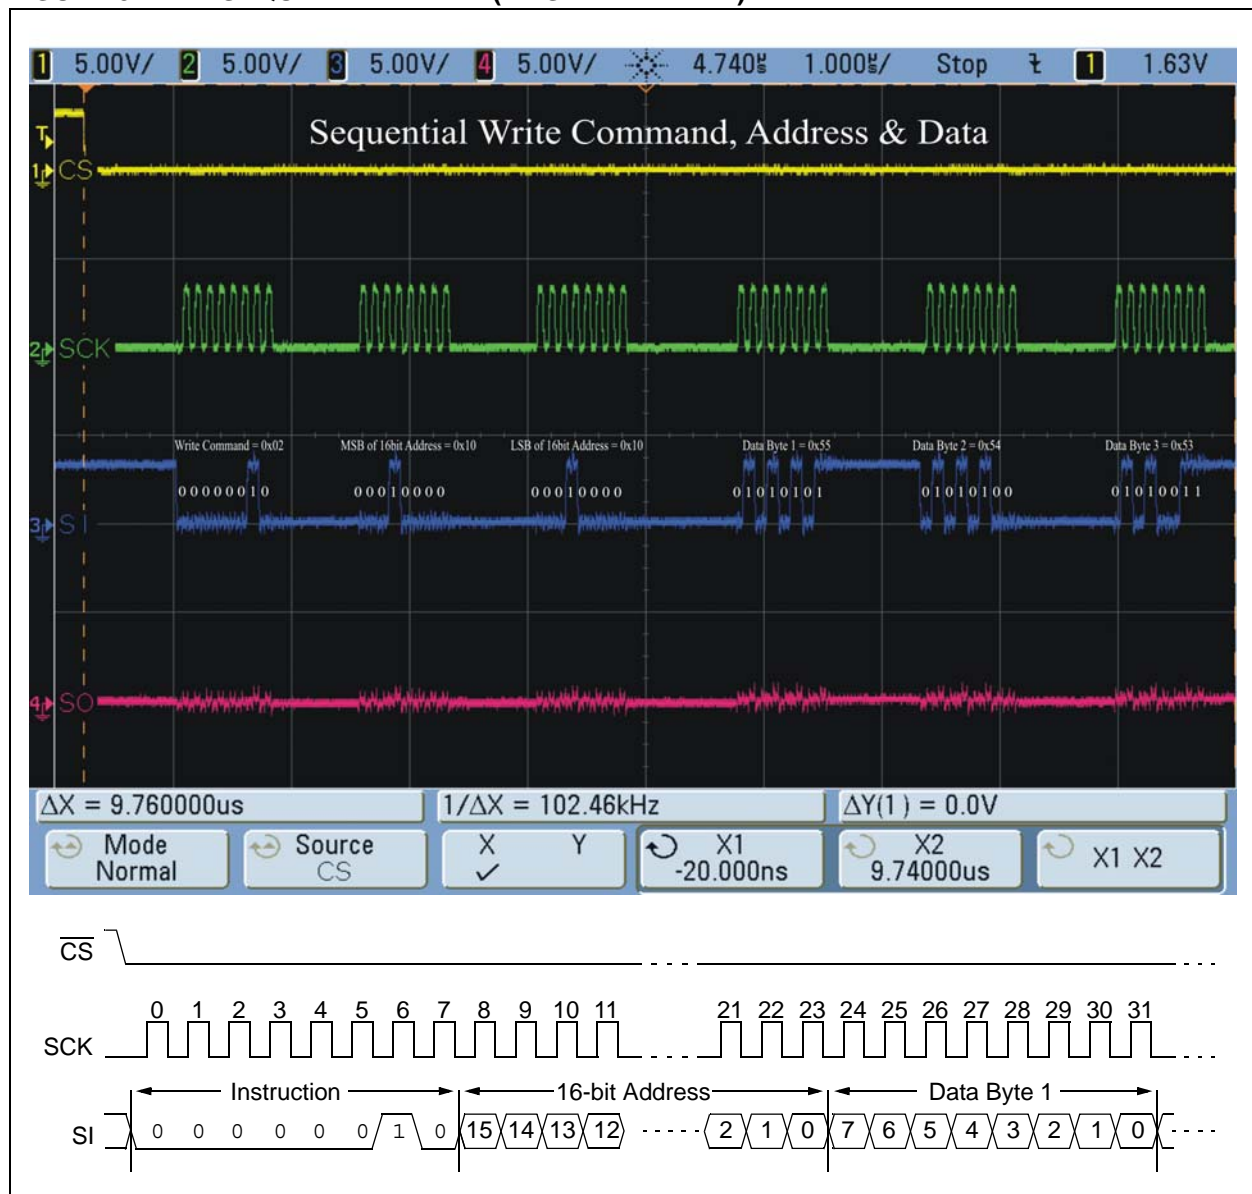

## SEQUENTIAL READ

Sequential read operation allows the entire array to be read from the SRAM. The internal address counter automatically increments and page boundaries are ignored. When the internal address counter reaches the end of the array, the address counter will roll over to 0x0000. Figure 9 shows an example of the sequence of commands necessary to perform a sequential write operation.

**FIGURE 9: SEQUENTIAL READ (FIRST READ DATA BYTE)**

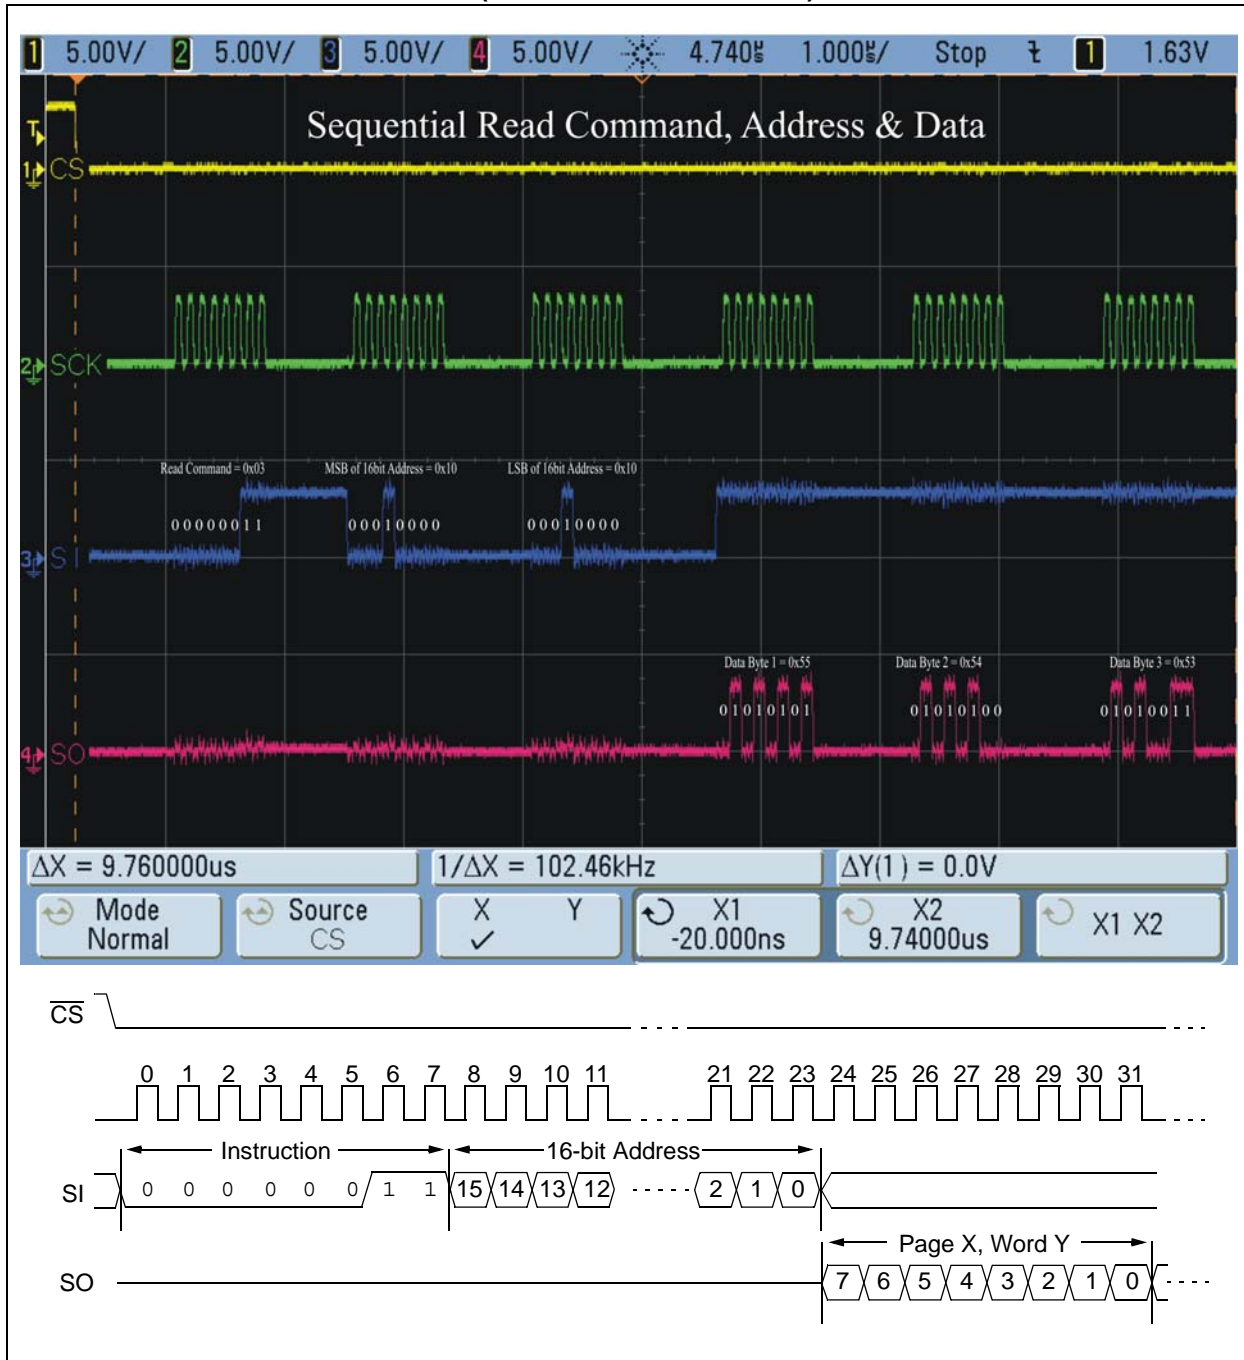

## CONCLUSION

This application note offers designers a set of firmware routines to access SPI serial SRAM. The code demonstrates byte, page and sequential operations. All the routines were written in C using the C32 compiler from Microchip. The code was tested on Microchip's Explorer 16 Development Board with the connections shown in Figure 1 with the PIC32MX360F512L PIM module.

# AN1277

---

NOTES:

---

**Note the following details of the code protection feature on Microchip devices:**

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

---

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

**Trademarks**

The Microchip name and logo, the Microchip logo, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, rfPIC and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.


FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, ICEPIC, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, nanoWatt XLP, Omniclient Code Generation, PICC, PICC-18, PICkit, PICDEM, PICDEM.net, PICtail, PIC<sup>32</sup> logo, REAL ICE, rFLAB, Select Mode, Total Endurance, TSHARC, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2009, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

**QUALITY MANAGEMENT SYSTEM**  
**CERTIFIED BY DNV**  
**== ISO/TS 16949:2002 ==**

*Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.*



---

---

## WORLDWIDE SALES AND SERVICE

---

---

### AMERICAS

**Corporate Office**  
2355 West Chandler Blvd.  
Chandler, AZ 85224-6199  
Tel: 480-792-7200  
Fax: 480-792-7277  
Technical Support:  
<http://support.microchip.com>  
Web Address:  
[www.microchip.com](http://www.microchip.com)

**Atlanta**  
Duluth, GA  
Tel: 678-957-9614  
Fax: 678-957-1455

**Boston**  
Westborough, MA  
Tel: 774-760-0087  
Fax: 774-760-0088

**Chicago**  
Itasca, IL  
Tel: 630-285-0071  
Fax: 630-285-0075

**Cleveland**  
Independence, OH  
Tel: 216-447-0464  
Fax: 216-447-0643

**Dallas**  
Addison, TX  
Tel: 972-818-7423  
Fax: 972-818-2924

**Detroit**  
Farmington Hills, MI  
Tel: 248-538-2250  
Fax: 248-538-2260

**Kokomo**  
Kokomo, IN  
Tel: 765-864-8360  
Fax: 765-864-8387

**Los Angeles**  
Mission Viejo, CA  
Tel: 949-462-9523  
Fax: 949-462-9608

**Santa Clara**  
Santa Clara, CA  
Tel: 408-961-6444  
Fax: 408-961-6445

**Toronto**  
Mississauga, Ontario,  
Canada  
Tel: 905-673-0699  
Fax: 905-673-6509

### ASIA/PACIFIC

**Asia Pacific Office**  
Suites 3707-14, 37th Floor  
Tower 6, The Gateway  
Harbour City, Kowloon  
Hong Kong  
Tel: 852-2401-1200  
Fax: 852-2401-3431

**Australia - Sydney**  
Tel: 61-2-9868-6733  
Fax: 61-2-9868-6755

**China - Beijing**  
Tel: 86-10-8528-2100  
Fax: 86-10-8528-2104

**China - Chengdu**  
Tel: 86-28-8665-5511  
Fax: 86-28-8665-7889

**China - Hong Kong SAR**  
Tel: 852-2401-1200  
Fax: 852-2401-3431

**China - Nanjing**  
Tel: 86-25-8473-2460  
Fax: 86-25-8473-2470

**China - Qingdao**  
Tel: 86-532-8502-7355  
Fax: 86-532-8502-7205

**China - Shanghai**  
Tel: 86-21-5407-5533  
Fax: 86-21-5407-5066

**China - Shenyang**  
Tel: 86-24-2334-2829  
Fax: 86-24-2334-2393

**China - Shenzhen**  
Tel: 86-755-8203-2660  
Fax: 86-755-8203-1760

**China - Wuhan**  
Tel: 86-27-5980-5300  
Fax: 86-27-5980-5118

**China - Xiamen**  
Tel: 86-592-2388138  
Fax: 86-592-2388130

**China - Xian**  
Tel: 86-29-8833-7252  
Fax: 86-29-8833-7256

**China - Zhuhai**  
Tel: 86-756-3210040  
Fax: 86-756-3210049

### ASIA/PACIFIC

**India - Bangalore**  
Tel: 91-80-3090-4444  
Fax: 91-80-3090-4080

**India - New Delhi**  
Tel: 91-11-4160-8631  
Fax: 91-11-4160-8632

**India - Pune**  
Tel: 91-20-2566-1512  
Fax: 91-20-2566-1513

**Japan - Yokohama**  
Tel: 81-45-471- 6166  
Fax: 81-45-471-6122

**Korea - Daegu**  
Tel: 82-53-744-4301  
Fax: 82-53-744-4302

**Korea - Seoul**  
Tel: 82-2-554-7200  
Fax: 82-2-558-5932 or  
82-2-558-5934

**Malaysia - Kuala Lumpur**  
Tel: 60-3-6201-9857  
Fax: 60-3-6201-9859

**Malaysia - Penang**  
Tel: 60-4-227-8870  
Fax: 60-4-227-4068

**Philippines - Manila**  
Tel: 63-2-634-9065  
Fax: 63-2-634-9069

**Singapore**  
Tel: 65-6334-8870  
Fax: 65-6334-8850

**Taiwan - Hsin Chu**  
Tel: 886-3-6578-300  
Fax: 886-3-6578-370

**Taiwan - Kaohsiung**  
Tel: 886-7-536-4818  
Fax: 886-7-536-4803

**Taiwan - Taipei**  
Tel: 886-2-2500-6610  
Fax: 886-2-2508-0102

**Thailand - Bangkok**  
Tel: 66-2-694-1351  
Fax: 66-2-694-1350

### EUROPE

**Austria - Wels**  
Tel: 43-7242-2244-39  
Fax: 43-7242-2244-393

**Denmark - Copenhagen**  
Tel: 45-4450-2828  
Fax: 45-4485-2829

**France - Paris**  
Tel: 33-1-69-53-63-20  
Fax: 33-1-69-30-90-79

**Germany - Munich**  
Tel: 49-89-627-144-0  
Fax: 49-89-627-144-44

**Italy - Milan**  
Tel: 39-0331-742611  
Fax: 39-0331-466781

**Netherlands - Drunen**  
Tel: 31-416-690399  
Fax: 31-416-690340

**Spain - Madrid**  
Tel: 34-91-708-08-90  
Fax: 34-91-708-08-91

**UK - Wokingham**  
Tel: 44-118-921-5869  
Fax: 44-118-921-5820